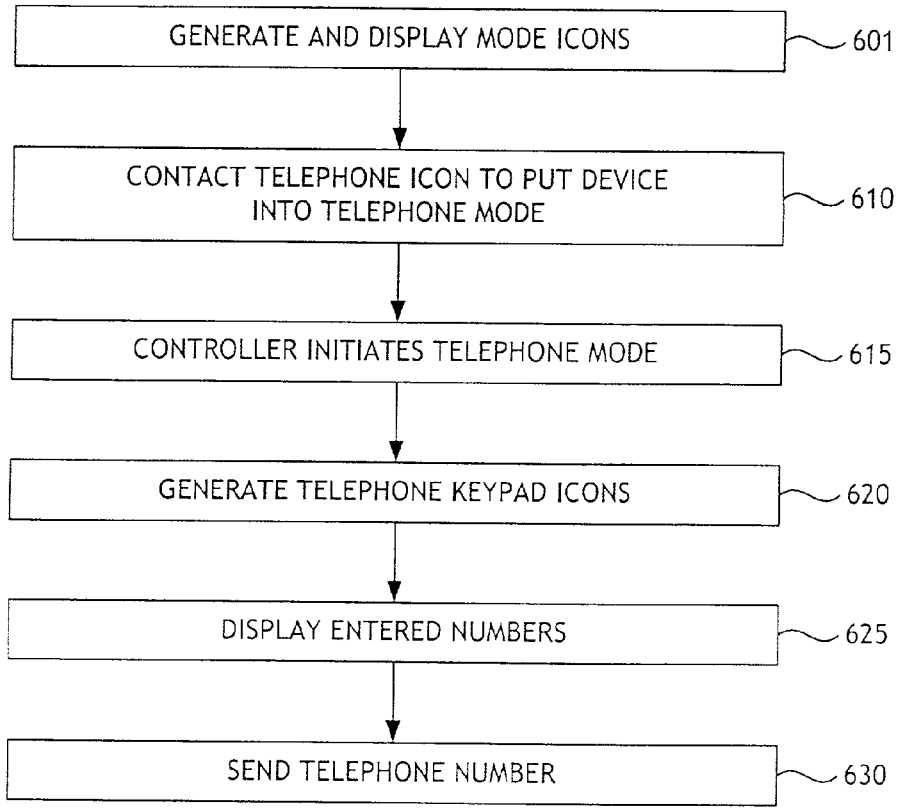
GENERATE AND DISPLAY MODE ICONS
601
CONTACT TELEPHONE ICON TO PUT DEVICE INTO TELEPHONE MODE
610
CONTROLLER INITIATES TELEPHONE MODE
615
GENERATE TELEPHONE KEYPAD ICONS
620
DISPLAY ENTERED NUMBERS
625
SEND TELEPHONE NUMBER
630

Fig. 6

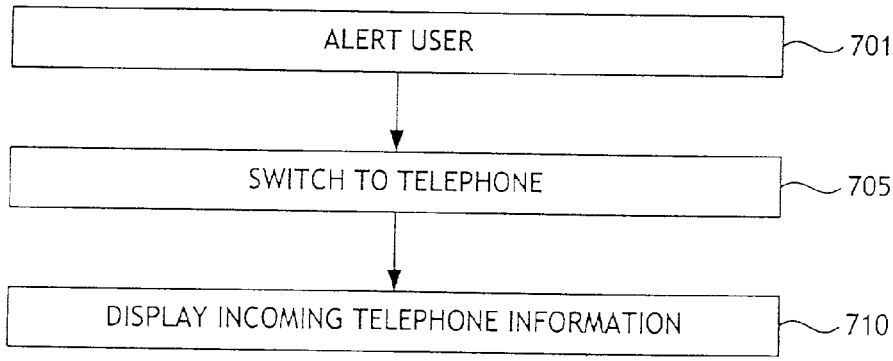
ALERT USER
701
SWITCH TO TELEPHONE
705
DISPLAY INCOMING TELEPHONE INFORMATION
710

Fig. 7