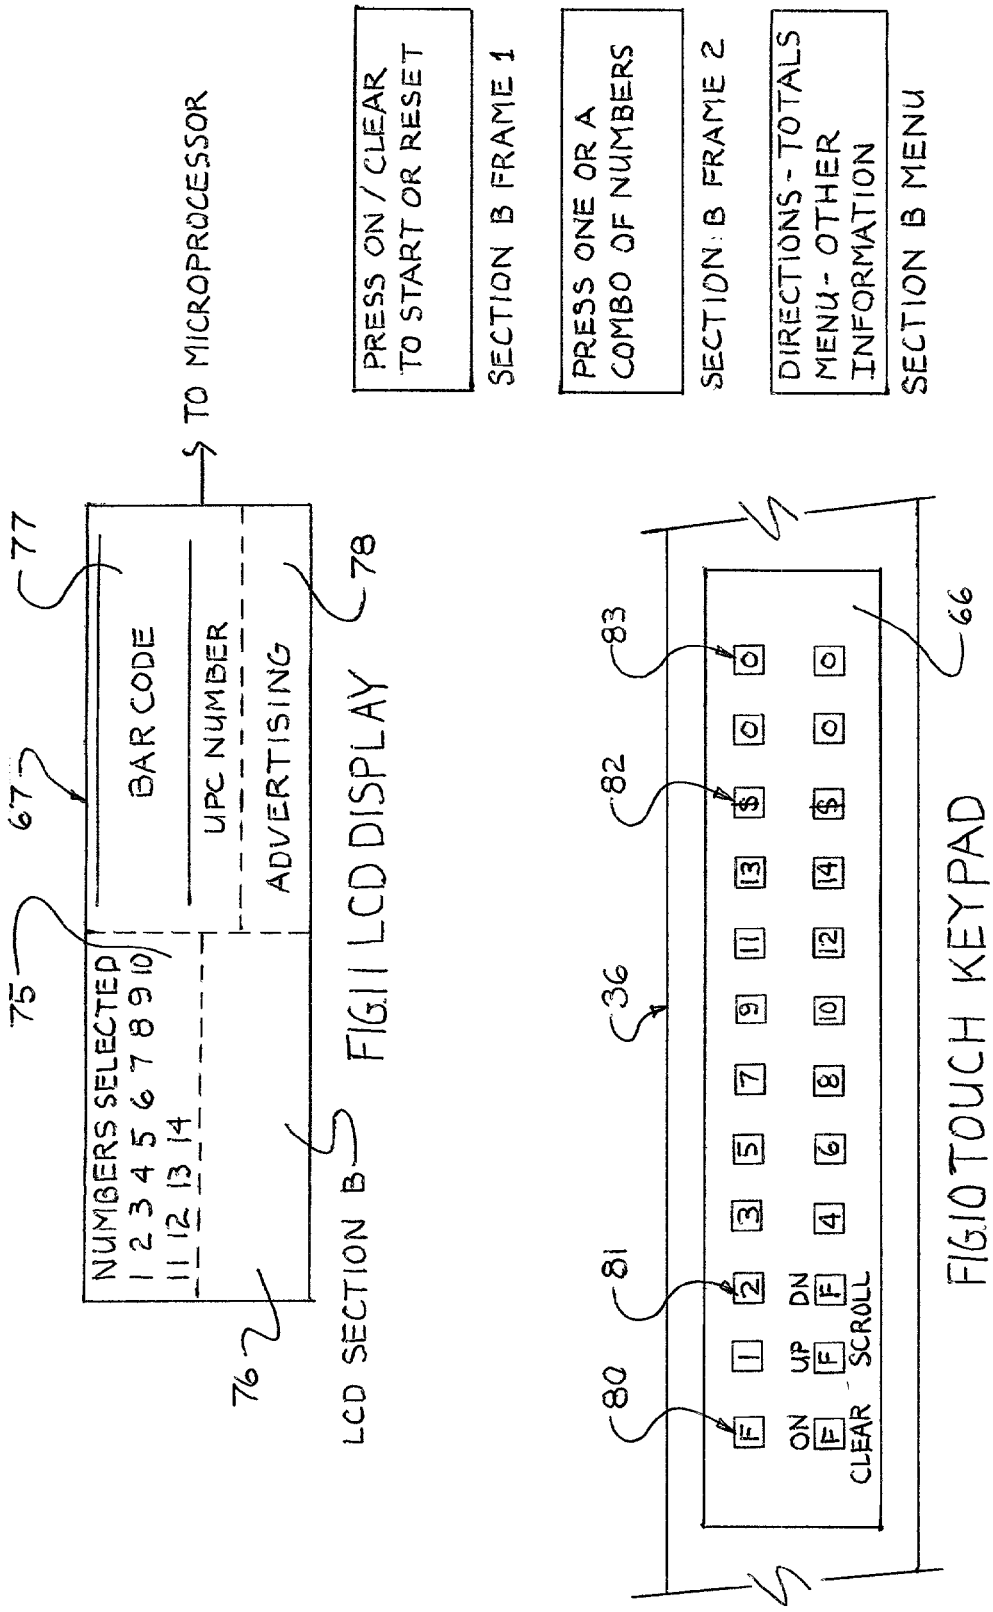
TO MICROPROCESSOR
PRESS ON / CLEAR TO START OR RESET
SECTION B FRAME 1
PRESS ONE OR A COMBO OF NUMBERS
SECTION B FRAME 2
DIRECTIONS - TOTALS MENU - OTHER INFORMATION
SECTION B MENU
77
67
75
76
78
BAR CODE
UPC NUMBER
ADVERTISING
NUMBERS SELECTED
1 2 3 4 5 6 7 8 9 10
11 12 13 14
LCD SECTION B
FIG.11 LCD DISPLAY
83
82
36
81
80
66
ON
CLEAR
UP
DN
SCROLL
FIG.10 TOUCH KEYPAD