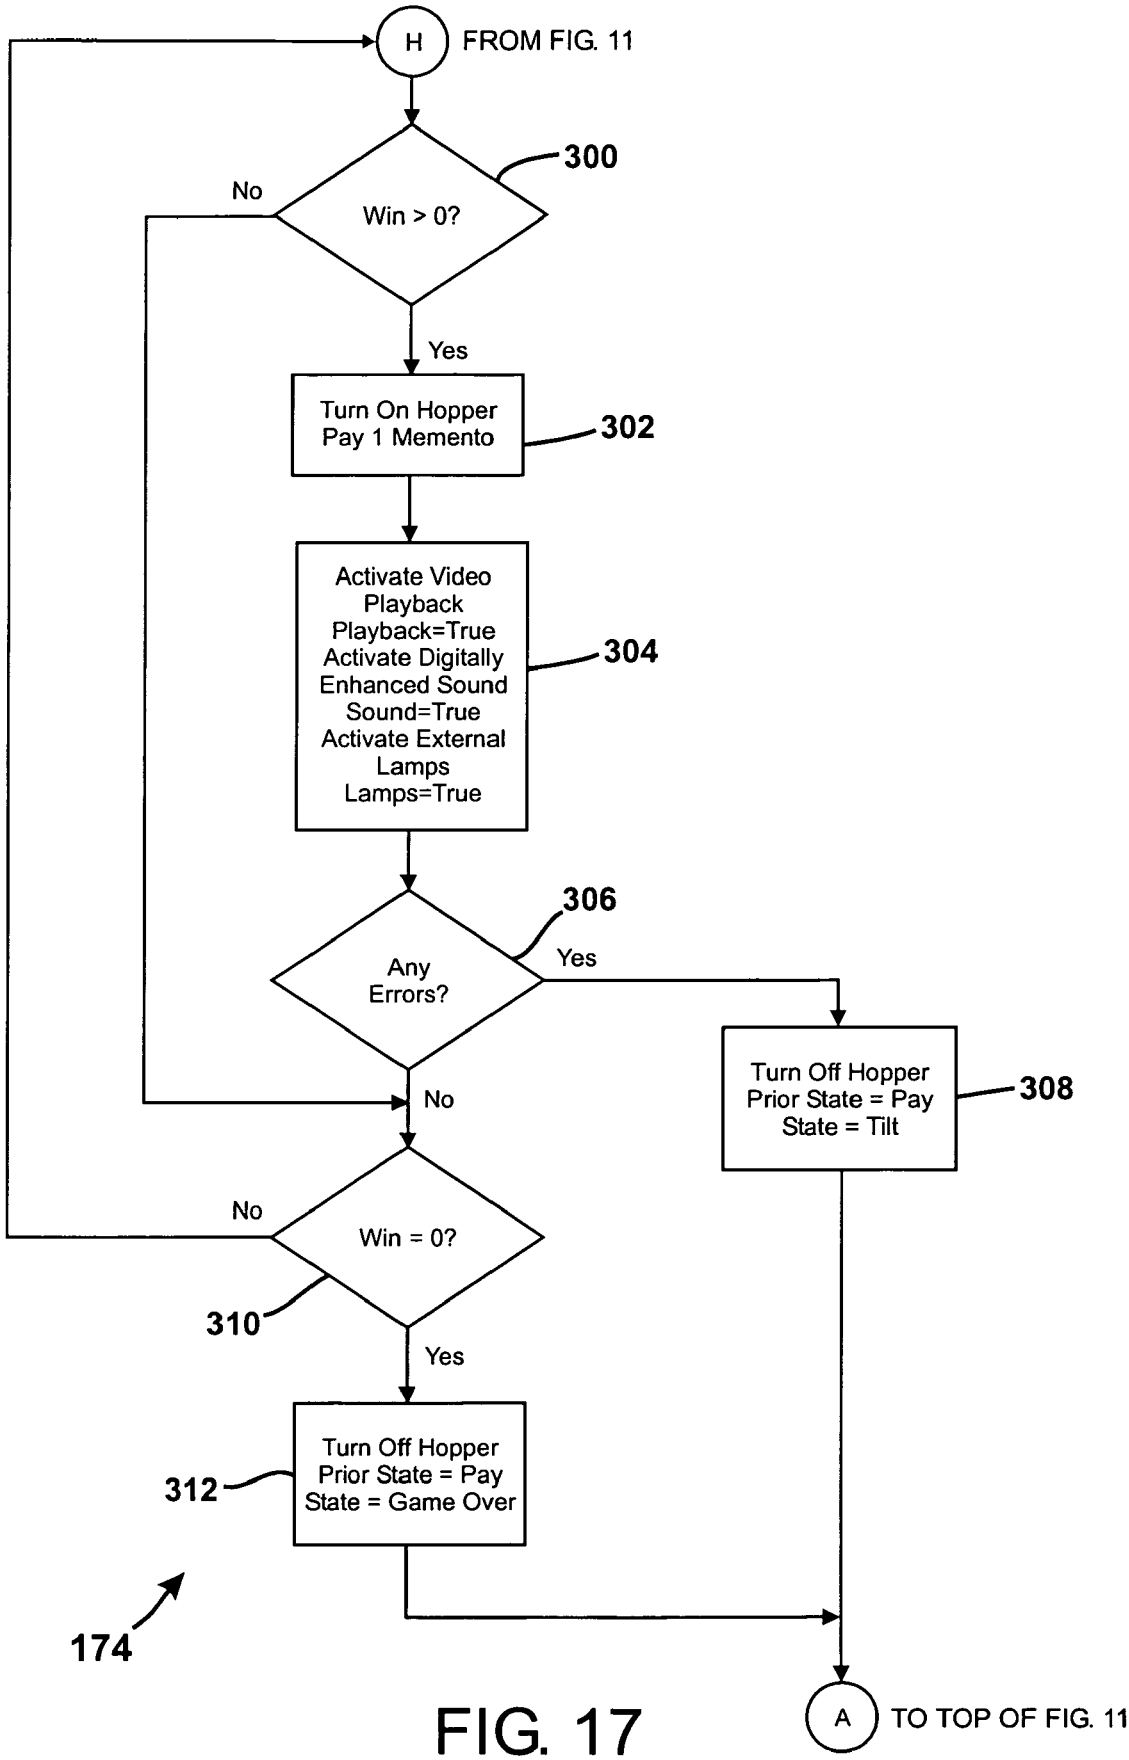
H
FROM FIG. 11
300
Win > 0?
No
Yes
Turn On Hopper
Pay 1 Memento
302
Activate Video
Playback
Playback=True
Activate Digitally
Enhanced Sound
Sound=True
Activate External
Lamps
Lamps=True
304
306
Any
Errors?
Yes
No
Turn Off Hopper
Prior State = Pay
State = Tilt
308
No
Win = 0?
310
Yes
Turn Off Hopper
Prior State = Pay
State = Game Over
312
174
A
TO TOP OF FIG. 11

FIG. 17