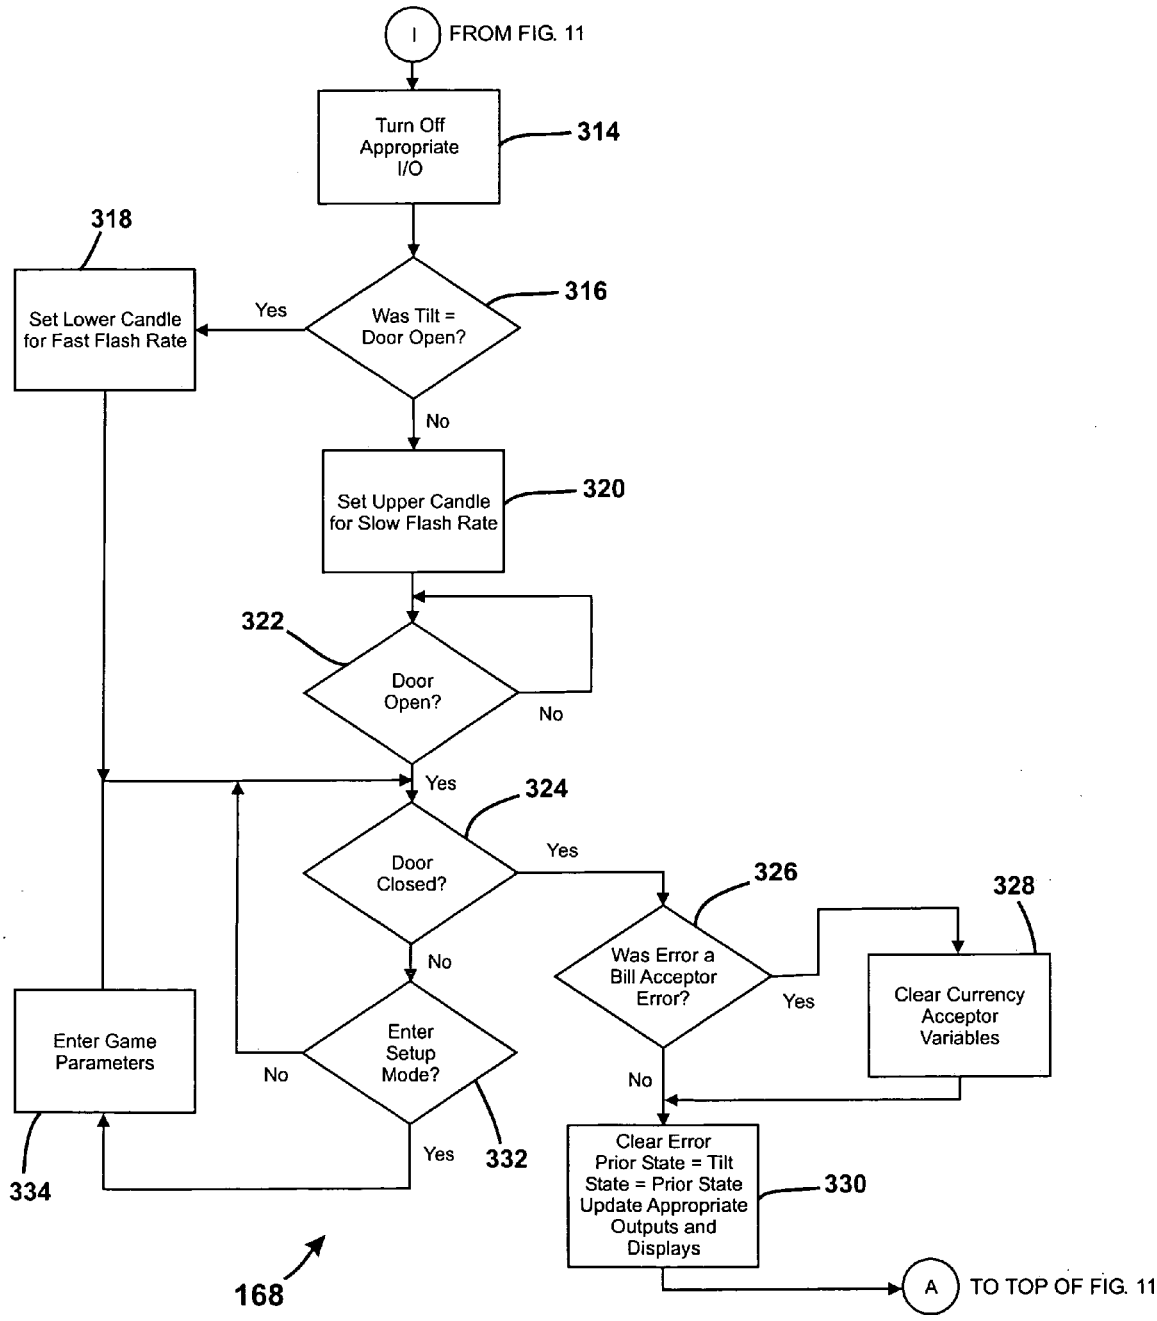
I
FROM FIG. 11
Turn Off Appropriate I/O
314
318
Set Lower Candle for Fast Flash Rate
Yes
Was Tilt = Door Open?
316
No
Set Upper Candle for Slow Flash Rate
320
322
Door Open?
No
Yes
324
Door Closed?
Yes
326
328
Was Error a Bill Acceptor Error?
Yes
Clear Currency Acceptor Variables
No
Enter Game Parameters
Enter Setup Mode?
No
No
Yes
332
334
Clear Error Prior State = Tilt State = Prior State Update Appropriate Outputs and Displays
330
168
A
TO TOP OF FIG. 11

FIG.18