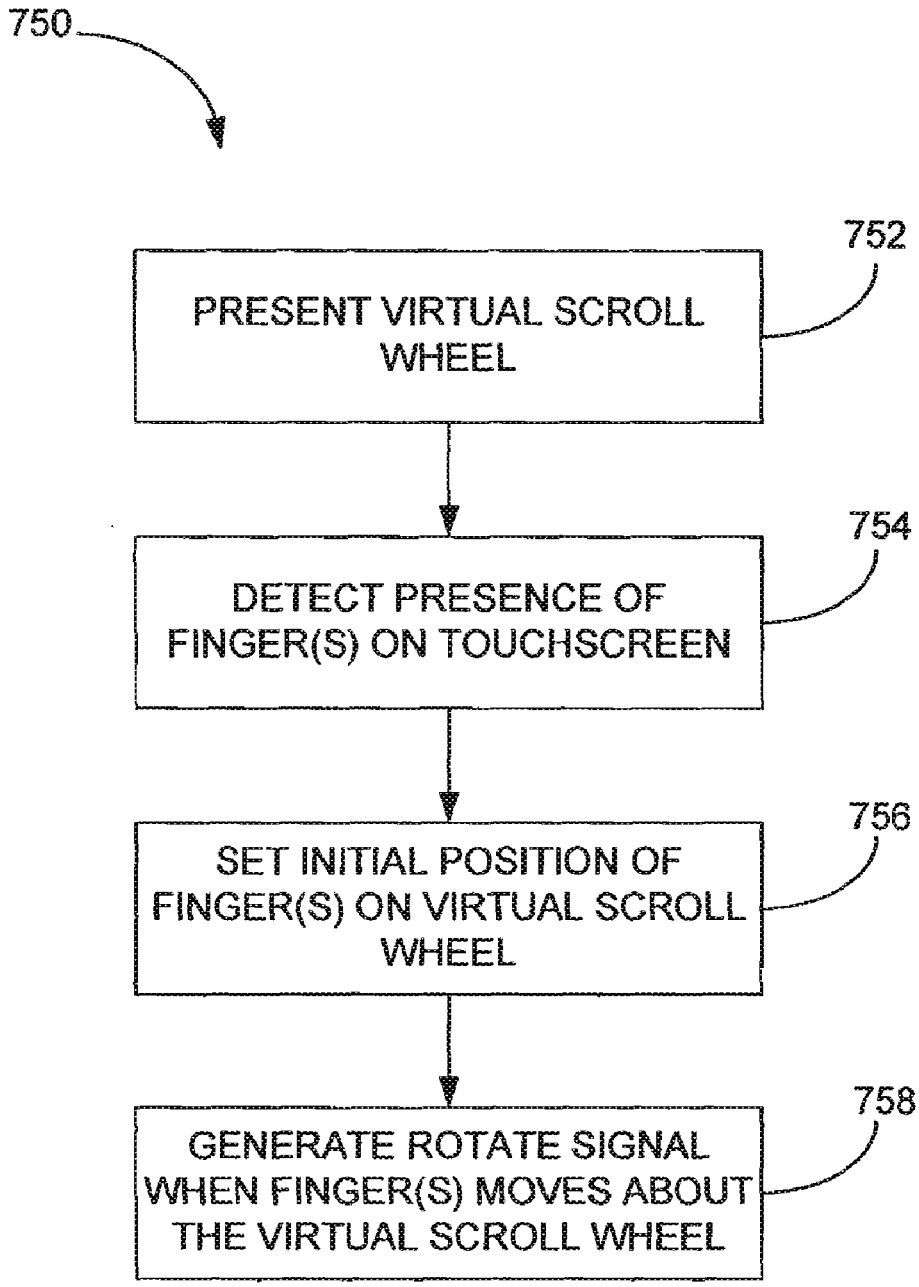
750
752
PRESENT VIRTUAL SCROLL WHEEL
754
DETECT PRESENCE OF FINGER(S) ON TOUCHSCREEN
756
SET INITIAL POSITION OF FINGER(S) ON VIRTUAL SCROLL WHEEL
758
GENERATE ROTATE SIGNAL WHEN FINGER(S) MOVES ABOUT THE VIRTUAL SCROLL WHEEL

FIG. 26