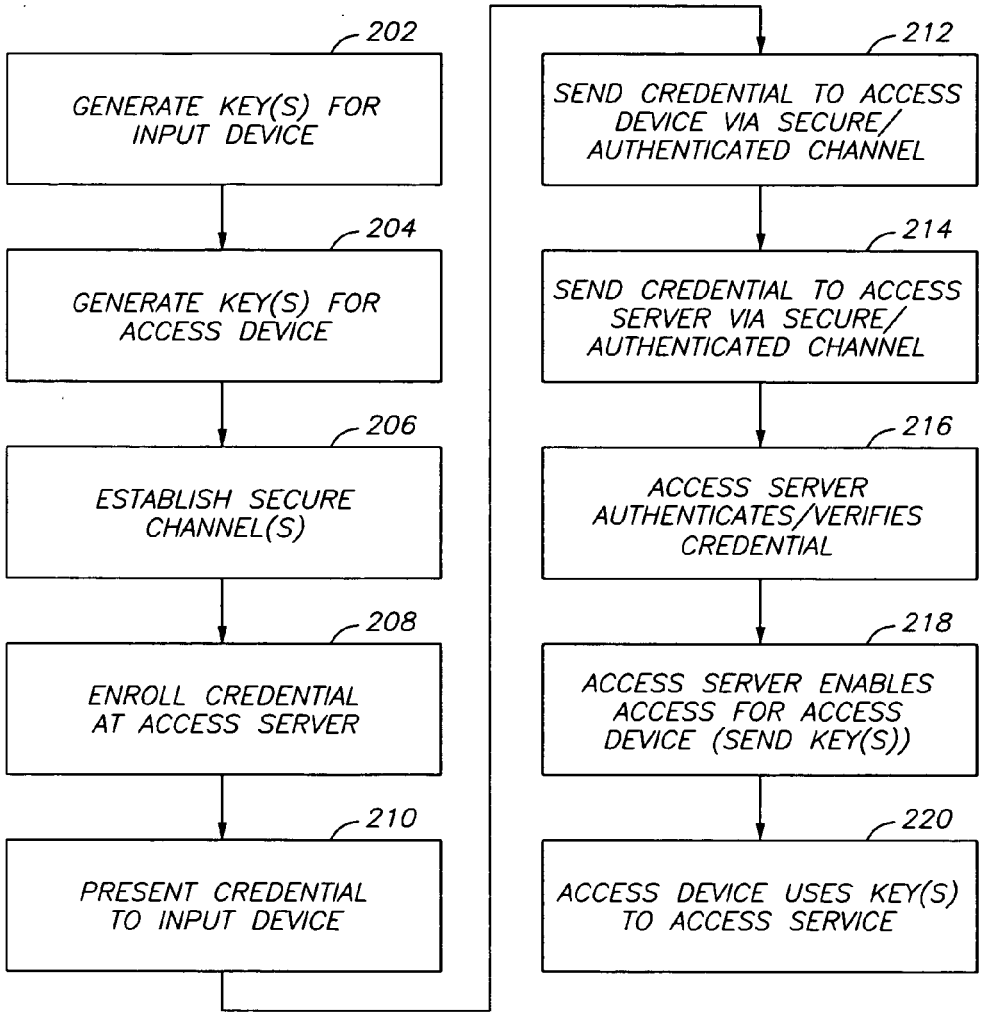
202
GENERATE KEY(S) FOR INPUT DEVICE
204
GENERATE KEY(S) FOR ACCESS DEVICE
206
ESTABLISH SECURE CHANNEL(S)
208
ENROLL CREDENTIAL AT ACCESS SERVER
210
PRESENT CREDENTIAL TO INPUT DEVICE
212
SEND CREDENTIAL TO ACCESS DEVICE VIA SECURE/ AUTHENTICATED CHANNEL
214
SEND CREDENTIAL TO ACCESS SERVER VIA SECURE/ AUTHENTICATED CHANNEL
216
ACCESS SERVER AUTHENTICATES/VERIFIES CREDENTIAL
218
ACCESS SERVER ENABLES ACCESS FOR ACCESS DEVICE (SEND KEY(S))
220
ACCESS DEVICE USES KEY(S) TO ACCESS SERVICE

FIG. 2