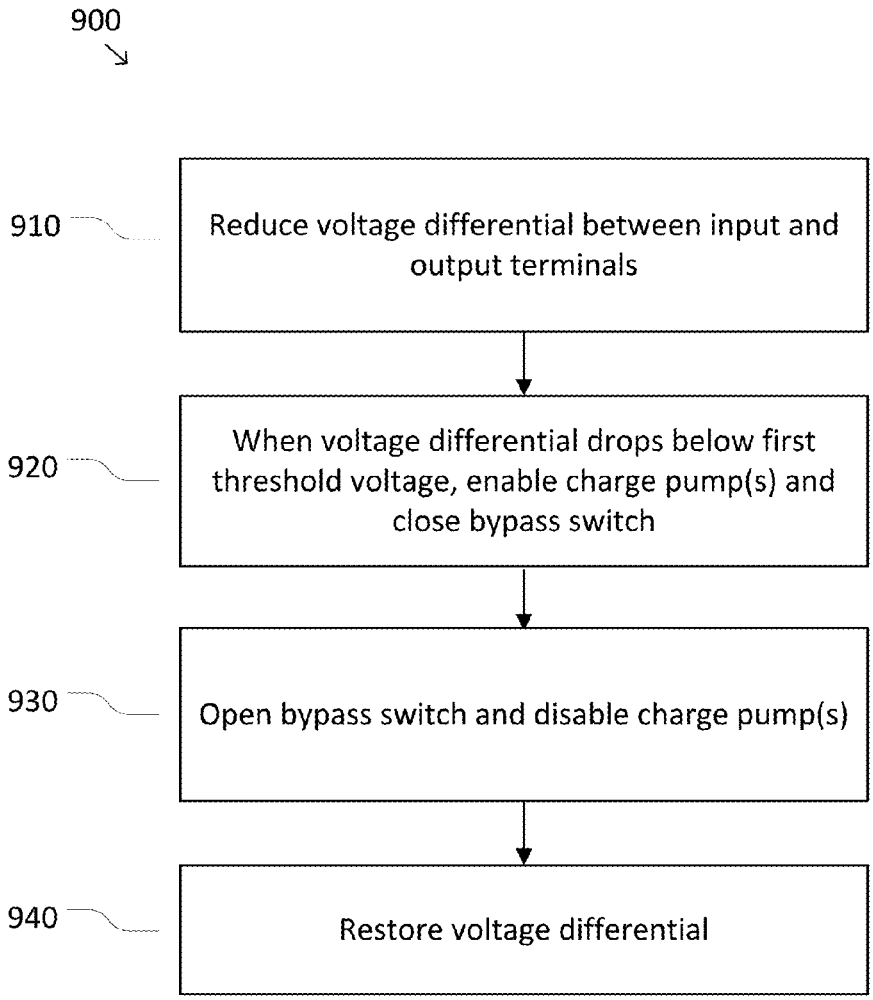
900
910
Reduce voltage differential between input and output terminals
920
When voltage differential drops below first threshold voltage, enable charge pump(s) and close bypass switch
930
Open bypass switch and disable charge pump(s)
940
Restore voltage differential

FIG. 9