FIG. 4

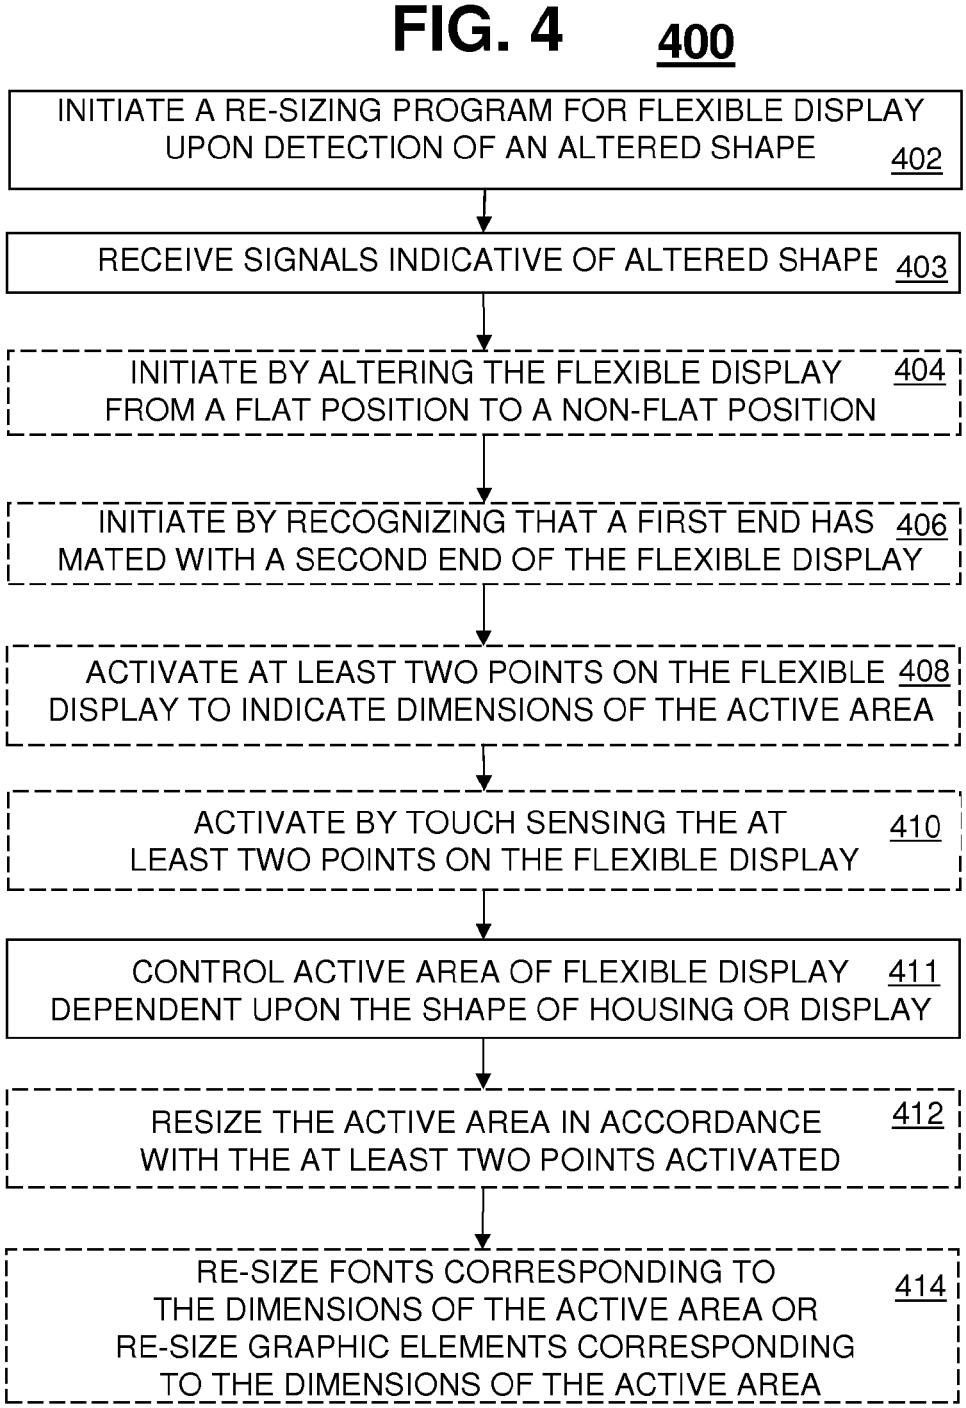
400
INITIATE A RE-SIZING PROGRAM FOR FLEXIBLE DISPLAY UPON DETECTION OF AN ALTERED SHAPE
402
RECEIVE SIGNALS INDICATIVE OF ALTERED SHAPE
403
INITIATE BY ALTERING THE FLEXIBLE DISPLAY FROM A FLAT POSITION TO A NON-FLAT POSITION
404
INITIATE BY RECOGNIZING THAT A FIRST END HAS MATED WITH A SECOND END OF THE FLEXIBLE DISPLAY
406
ACTIVATE AT LEAST TWO POINTS ON THE FLEXIBLE DISPLAY TO INDICATE DIMENSIONS OF THE ACTIVE AREA
408
ACTIVATE BY TOUCH SENSING THE AT LEAST TWO POINTS ON THE FLEXIBLE DISPLAY
410
CONTROL ACTIVE AREA OF FLEXIBLE DISPLAY DEPENDENT UPON THE SHAPE OF HOUSING OR DISPLAY
411
RESIZE THE ACTIVE AREA IN ACCORDANCE WITH THE AT LEAST TWO POINTS ACTIVATED
412
RE-SIZE FONTS CORRESPONDING TO THE DIMENSIONS OF THE ACTIVE AREA OR RE-SIZE GRAPHIC ELEMENTS CORRESPONDING TO THE DIMENSIONS OF THE ACTIVE AREA
414