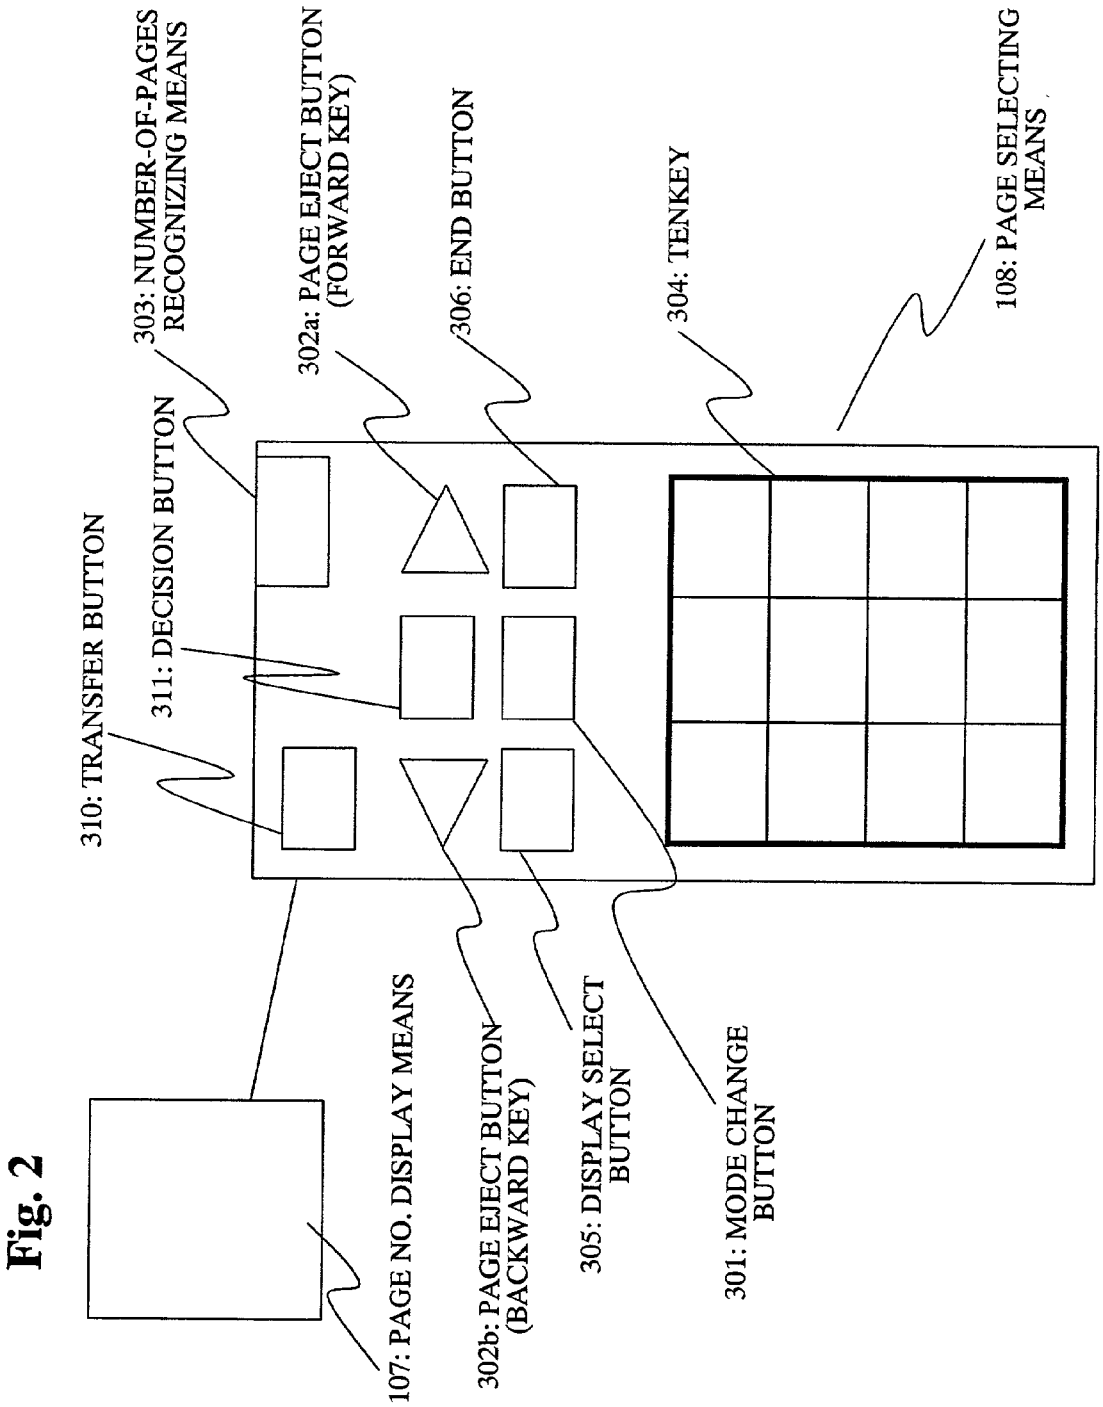
303: NUMBER-OF-PAGES RECOGNIZING MEANS
302a: PAGE EJECT BUTTON (FORWARD KEY)
306: END BUTTON
304: TENKEY
108: PAGE SELECTING MEANS
310: TRANSFER BUTTON
311: DECISION BUTTON
107: PAGE NO. DISPLAY MEANS
302b: PAGE EJECT BUTTON (BACKWARD KEY)
305: DISPLAY SELECT BUTTON
301: MODE CHANGE BUTTON

Fig. 2