FIG. 2

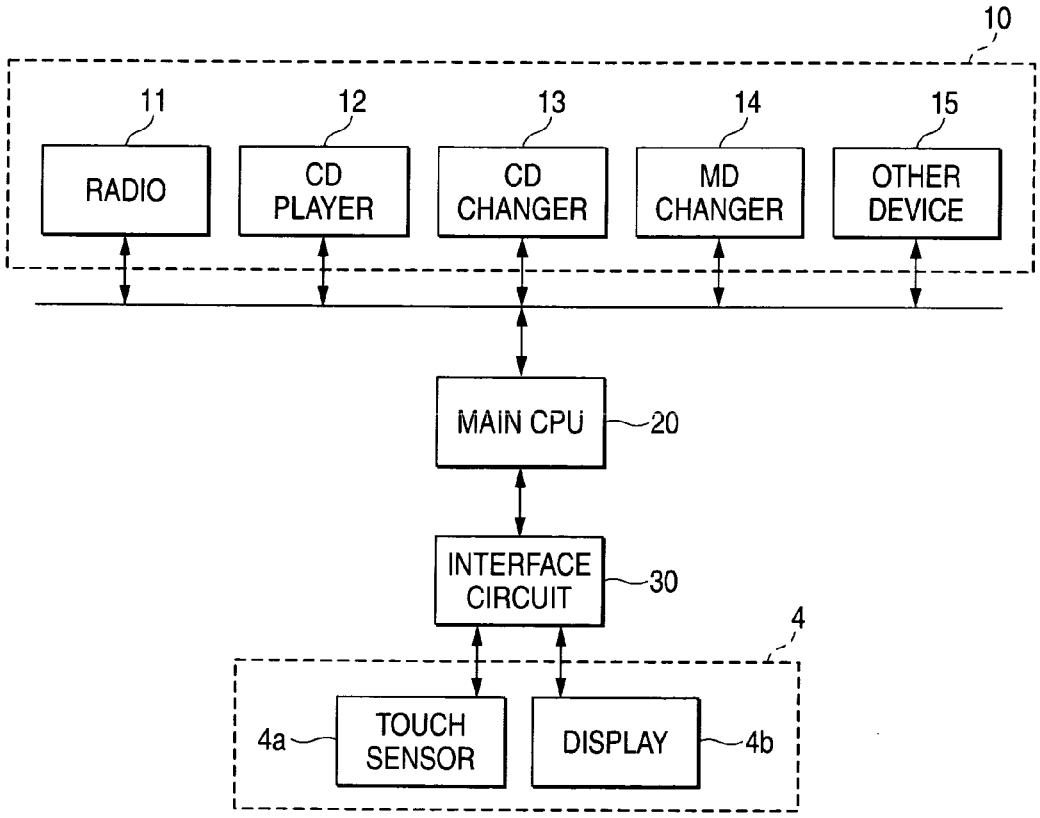
10
11
12
13
14
15
RADIO
CD PLAYER
CD CHANGER
MD CHANGER
OTHER DEVICE
MAIN CPU
20
INTERFACE CIRCUIT
30
4
4a
TOUCH SENSOR
DISPLAY
4b