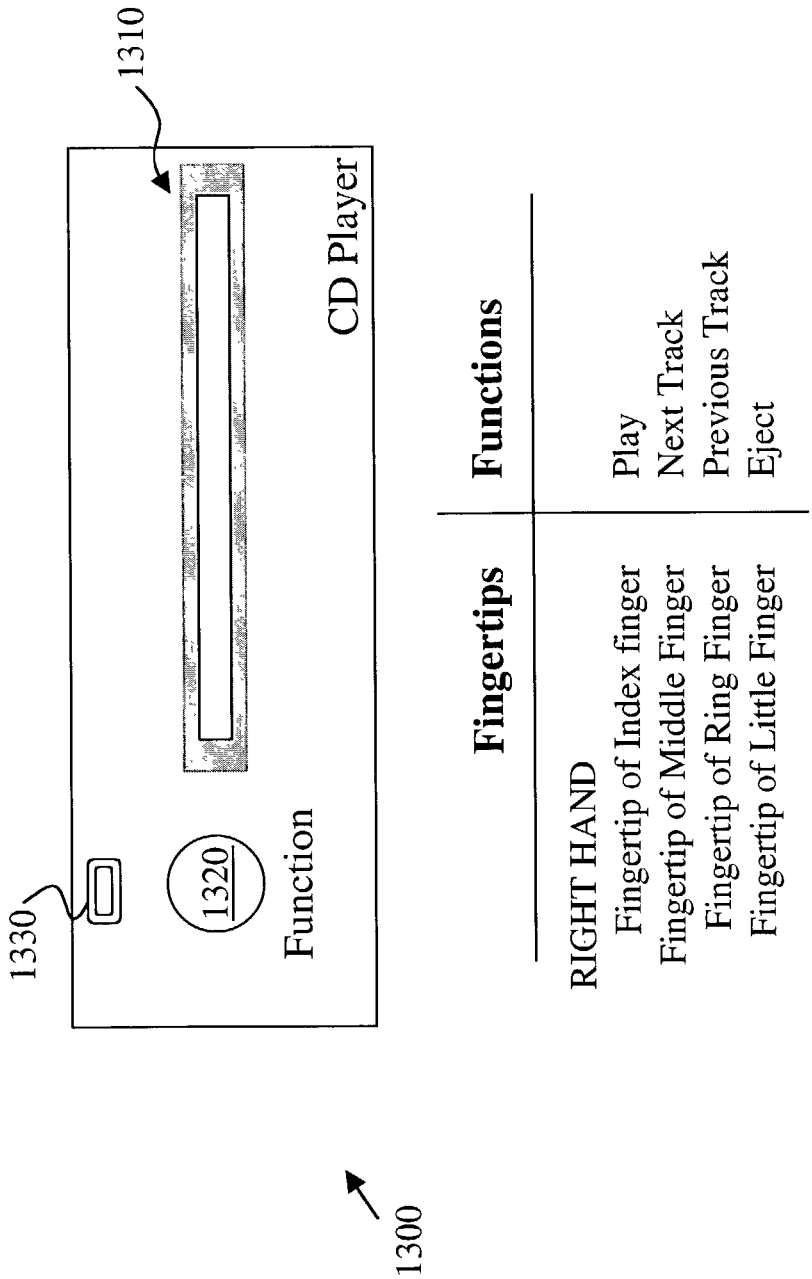
1310
CD Player
1330
1320
Function
1300
Fingertips
Functions
RIGHT HAND
Fingertip of Index finger
Fingertip of Middle Finger
Fingertip of Ring Finger
Fingertip of Little Finger
Play
Next Track
Previous Track
Eject

Figure 13