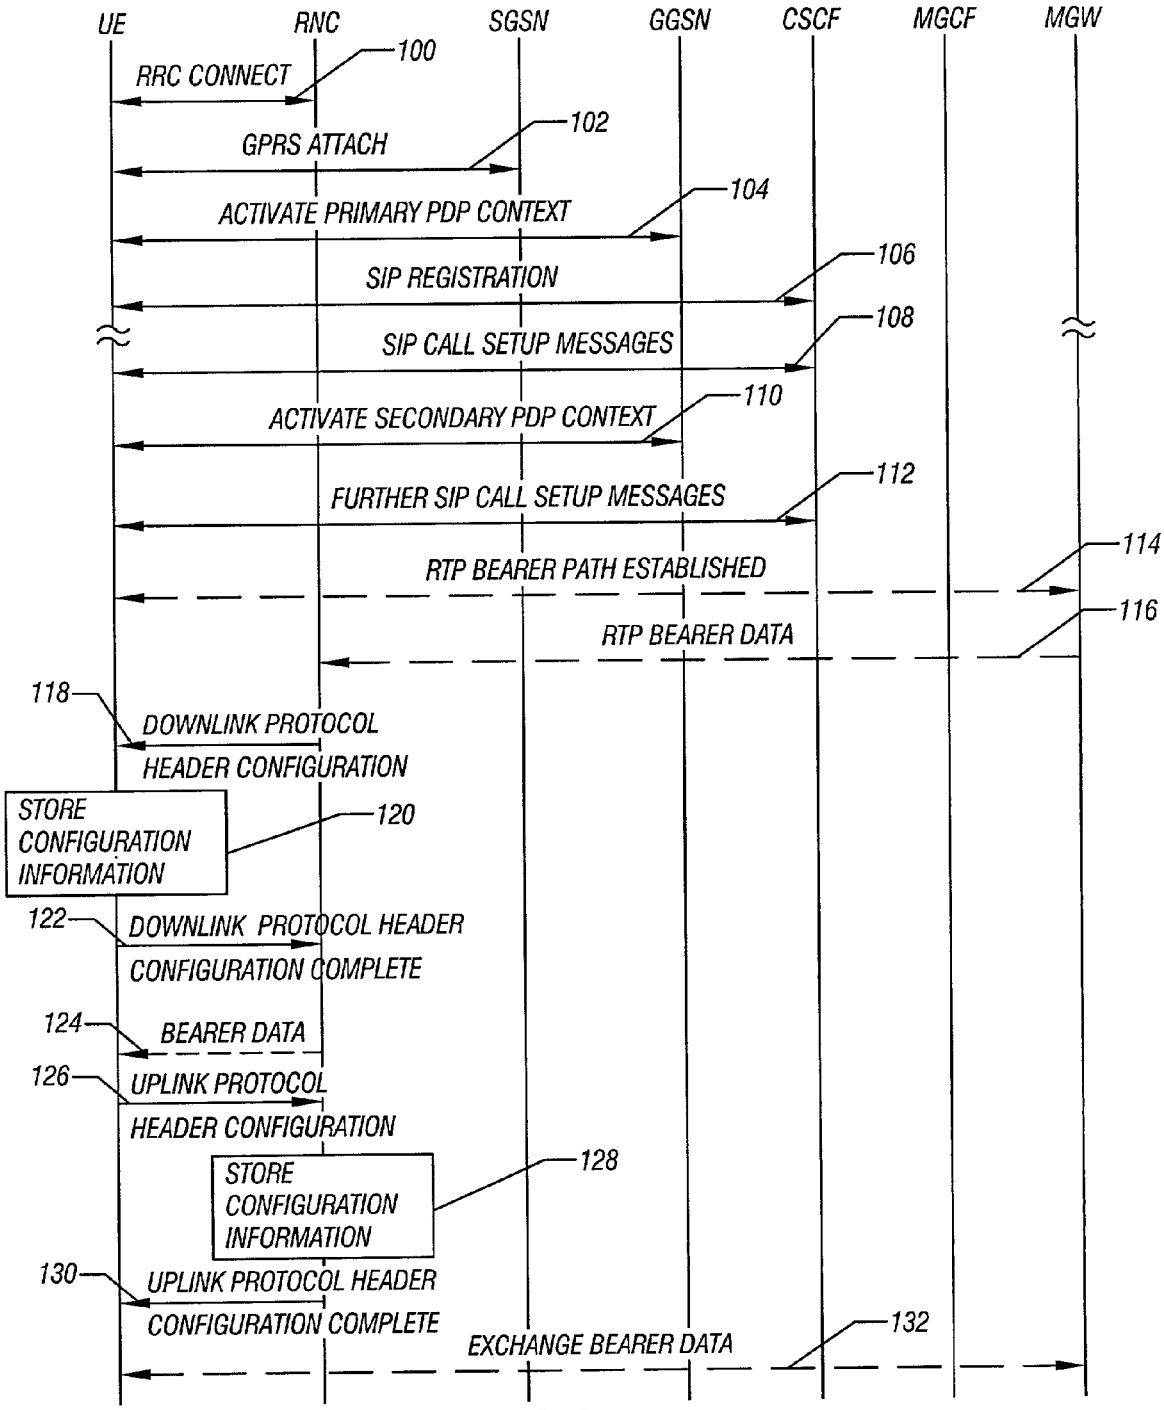
UE
RNC
SGSN
GGSN
CSCF
MGCF
MGW
100
RRC CONNECT
102
GPRS ATTACH
104
ACTIVATE PRIMARY PDP CONTEXT
106
SIP REGISTRATION
108
SIP CALL SETUP MESSAGES
110
ACTIVATE SECONDARY PDP CONTEXT
112
FURTHER SIP CALL SETUP MESSAGES
114
RTP BEARER PATH ESTABLISHED
116
RTP BEARER DATA
118
DOWNLINK PROTOCOL
HEADER CONFIGURATION
STORE
CONFIGURATION
INFORMATION
120
122
DOWNLINK PROTOCOL HEADER
CONFIGURATION COMPLETE
124
BEARER DATA
126
UPLINK PROTOCOL
HEADER CONFIGURATION
STORE
CONFIGURATION
INFORMATION
128
130
UPLINK PROTOCOL HEADER
CONFIGURATION COMPLETE
132
EXCHANGE BEARER DATA

FIG. 3