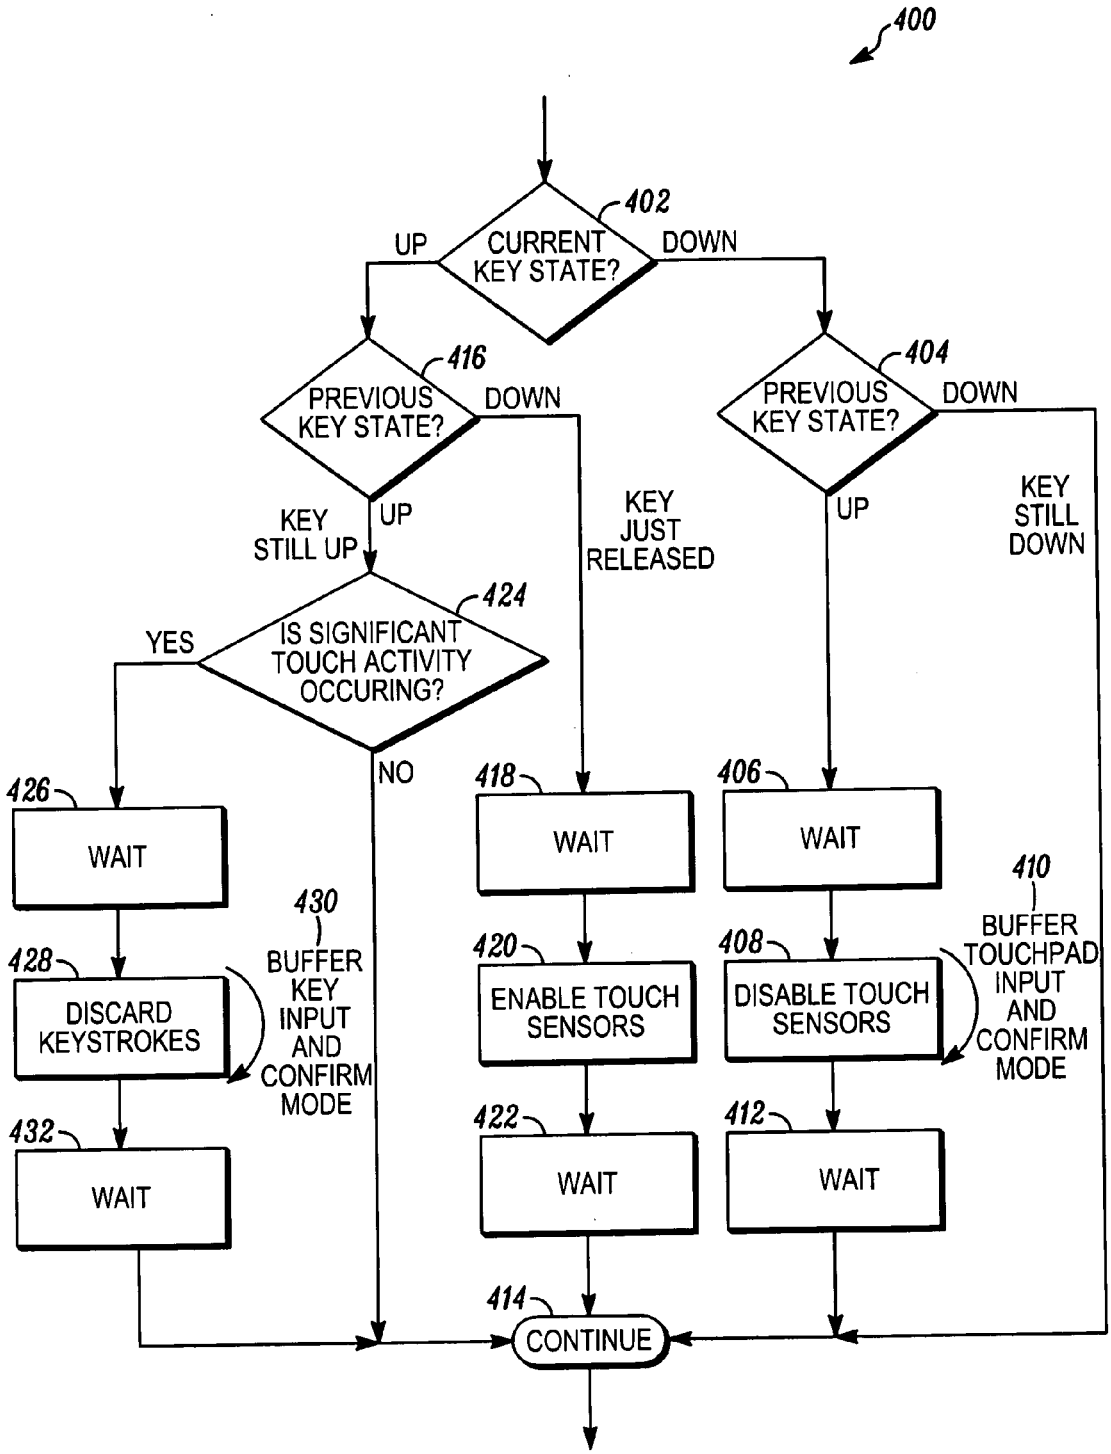
400
402
CURRENT KEY STATE?
UP
DOWN
416
PREVIOUS KEY STATE?
DOWN
404
PREVIOUS KEY STATE?
DOWN
KEY STILL UP
UP
KEY JUST RELEASED
UP
KEY STILL DOWN
424
IS SIGNIFICANT TOUCH ACTIVITY OCCURING?
YES
NO
426
WAIT
428
DISCARD KEYSTROKES
430
BUFFER KEY INPUT AND CONFIRM MODE
432
WAIT
418
WAIT
420
ENABLE TOUCH SENSORS
422
WAIT
406
WAIT
408
DISABLE TOUCH SENSORS
410
BUFFER TOUCHPAD INPUT AND CONFIRM MODE
412
WAIT
414
CONTINUE

FIG. 4