FIG 13

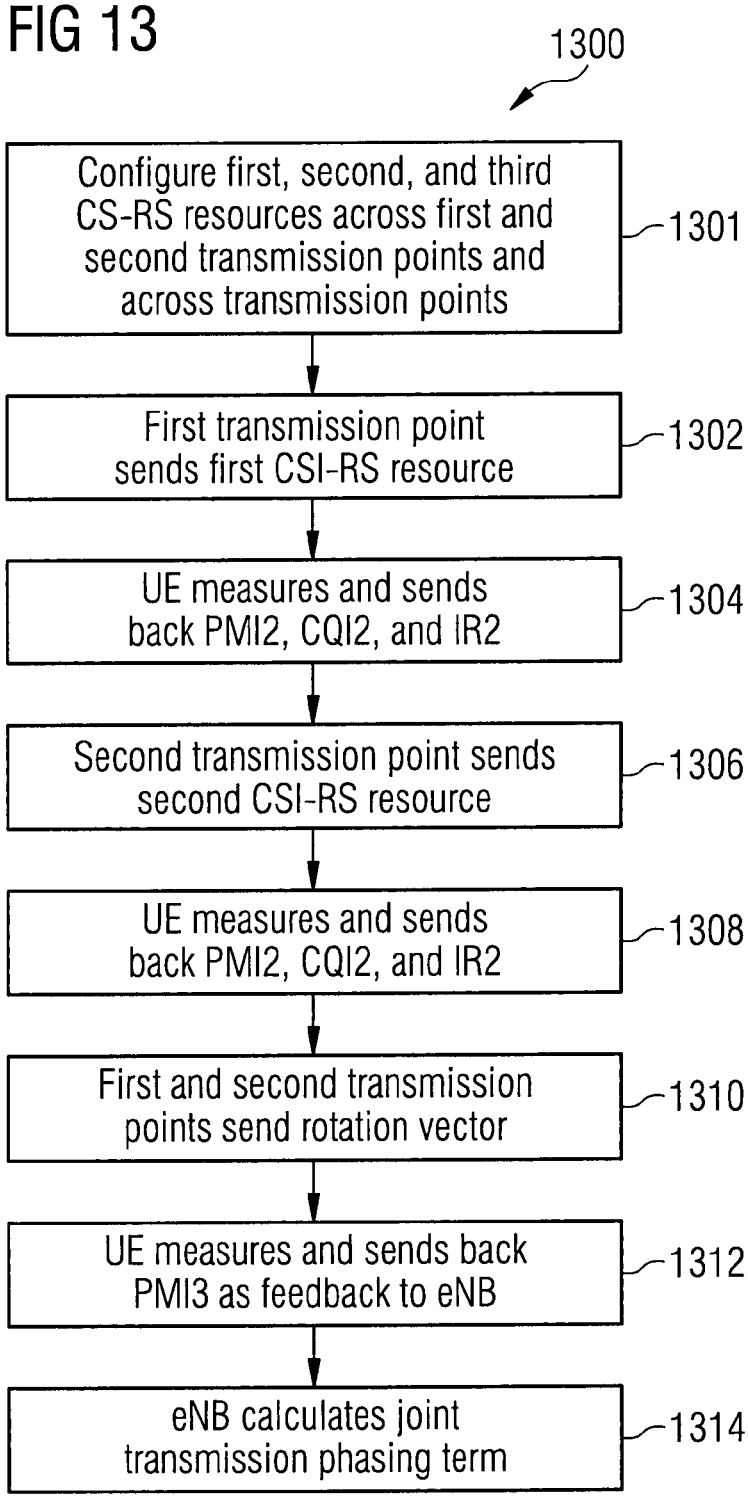
1300
Configure first, second, and third CS-RS resources across first and second transmission points and across transmission points
1301
First transmission point sends first CSI-RS resource
1302
UE measures and sends back PMI2, CQI2, and IR2
1304
Second transmission point sends second CSI-RS resource
1306
UE measures and sends back PMI2, CQI2, and IR2
1308
First and second transmission points send rotation vector
1310
UE measures and sends back PMI3 as feedback to eNB
1312
eNB calculates joint transmission phasing term
1314