FIG. 42

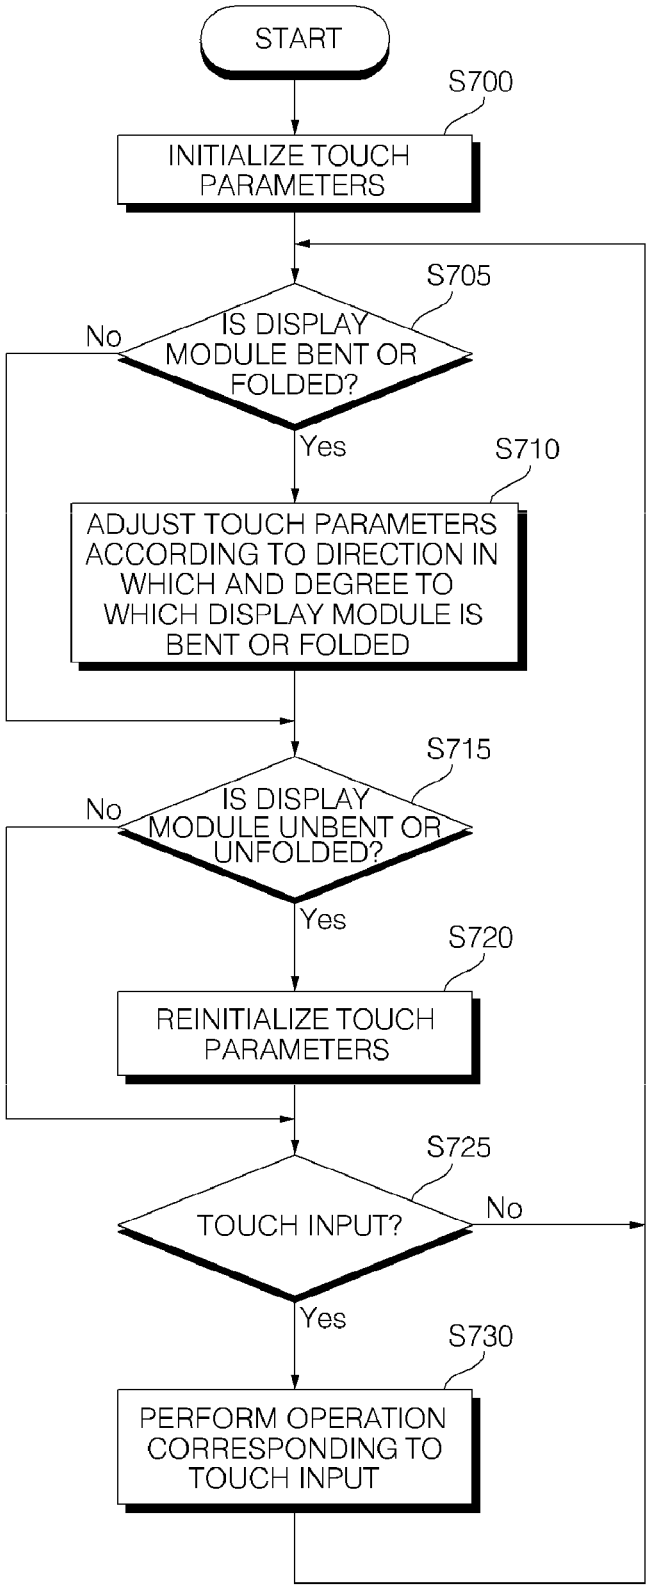
START
S700
INITIALIZE TOUCH PARAMETERS
S705
IS DISPLAY MODULE BENT OR FOLDED?
No
Yes
S710
ADJUST TOUCH PARAMETERS ACCORDING TO DIRECTION IN WHICH AND DEGREE TO WHICH DISPLAY MODULE IS BENT OR FOLDED
S715
IS DISPLAY MODULE UNBENT OR UNFOLDED?
No
Yes
S720
REINITIALIZE TOUCH PARAMETERS
S725
TOUCH INPUT?
No
Yes
S730
PERFORM OPERATION CORRESPONDING TO TOUCH INPUT