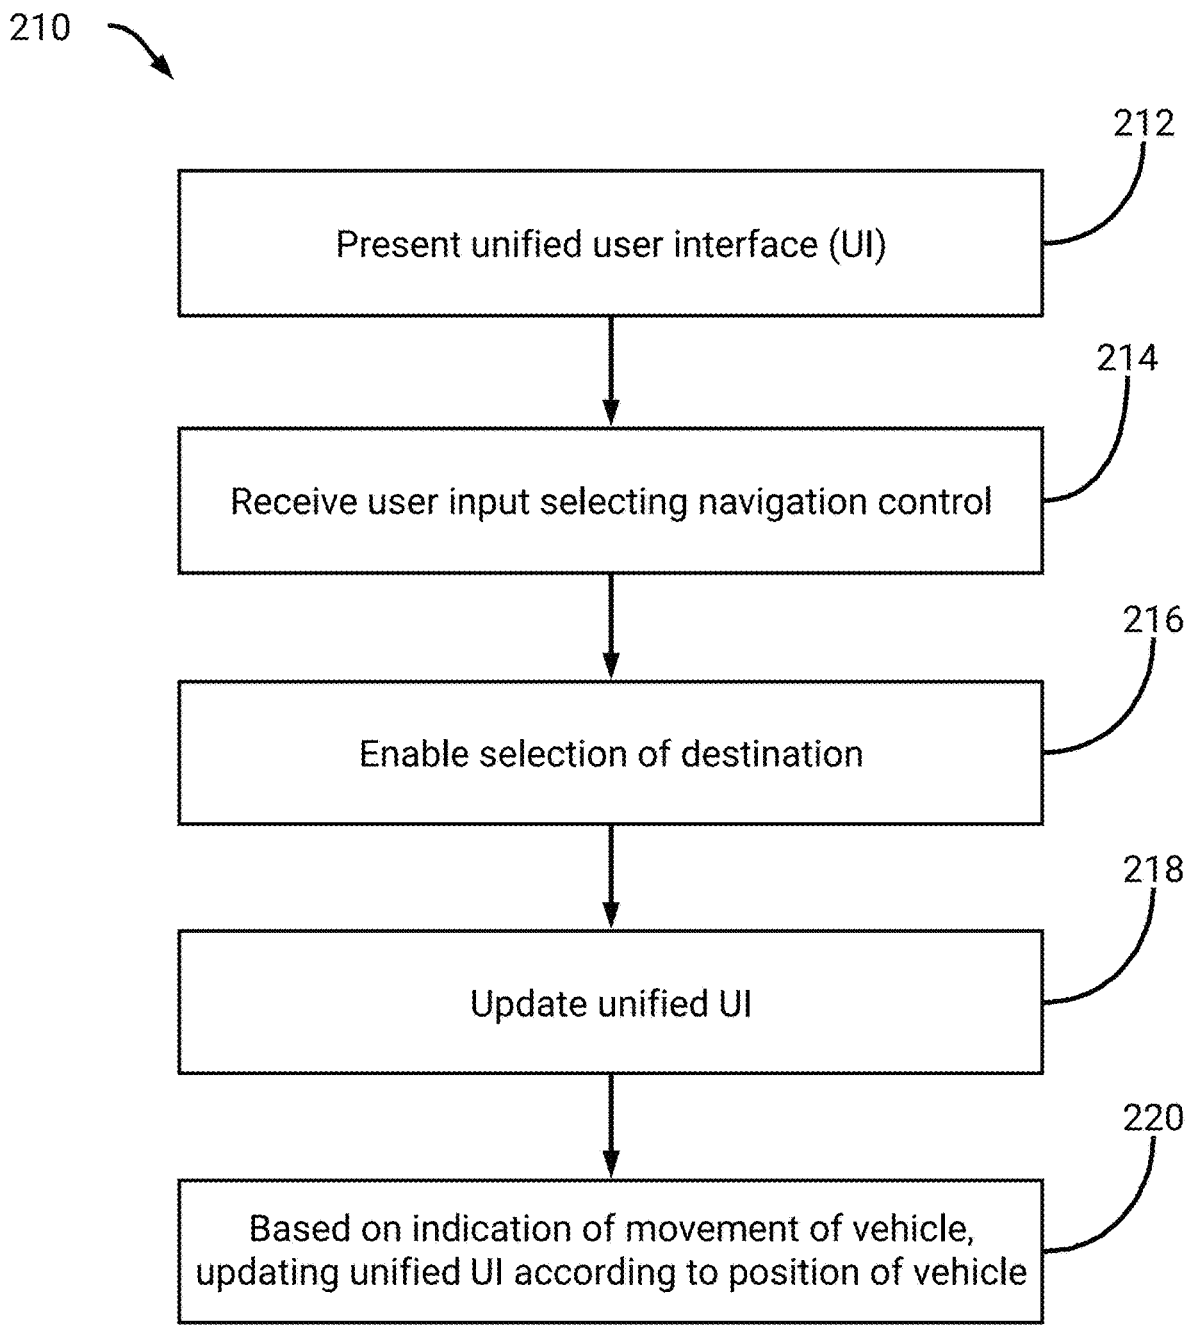
210
212
Present unified user interface (UI)
214
Receive user input selecting navigation control
216
Enable selection of destination
218
Update unified UI
220
Based on indication of movement of vehicle, updating unified UI according to position of vehicle

FIG. 2B