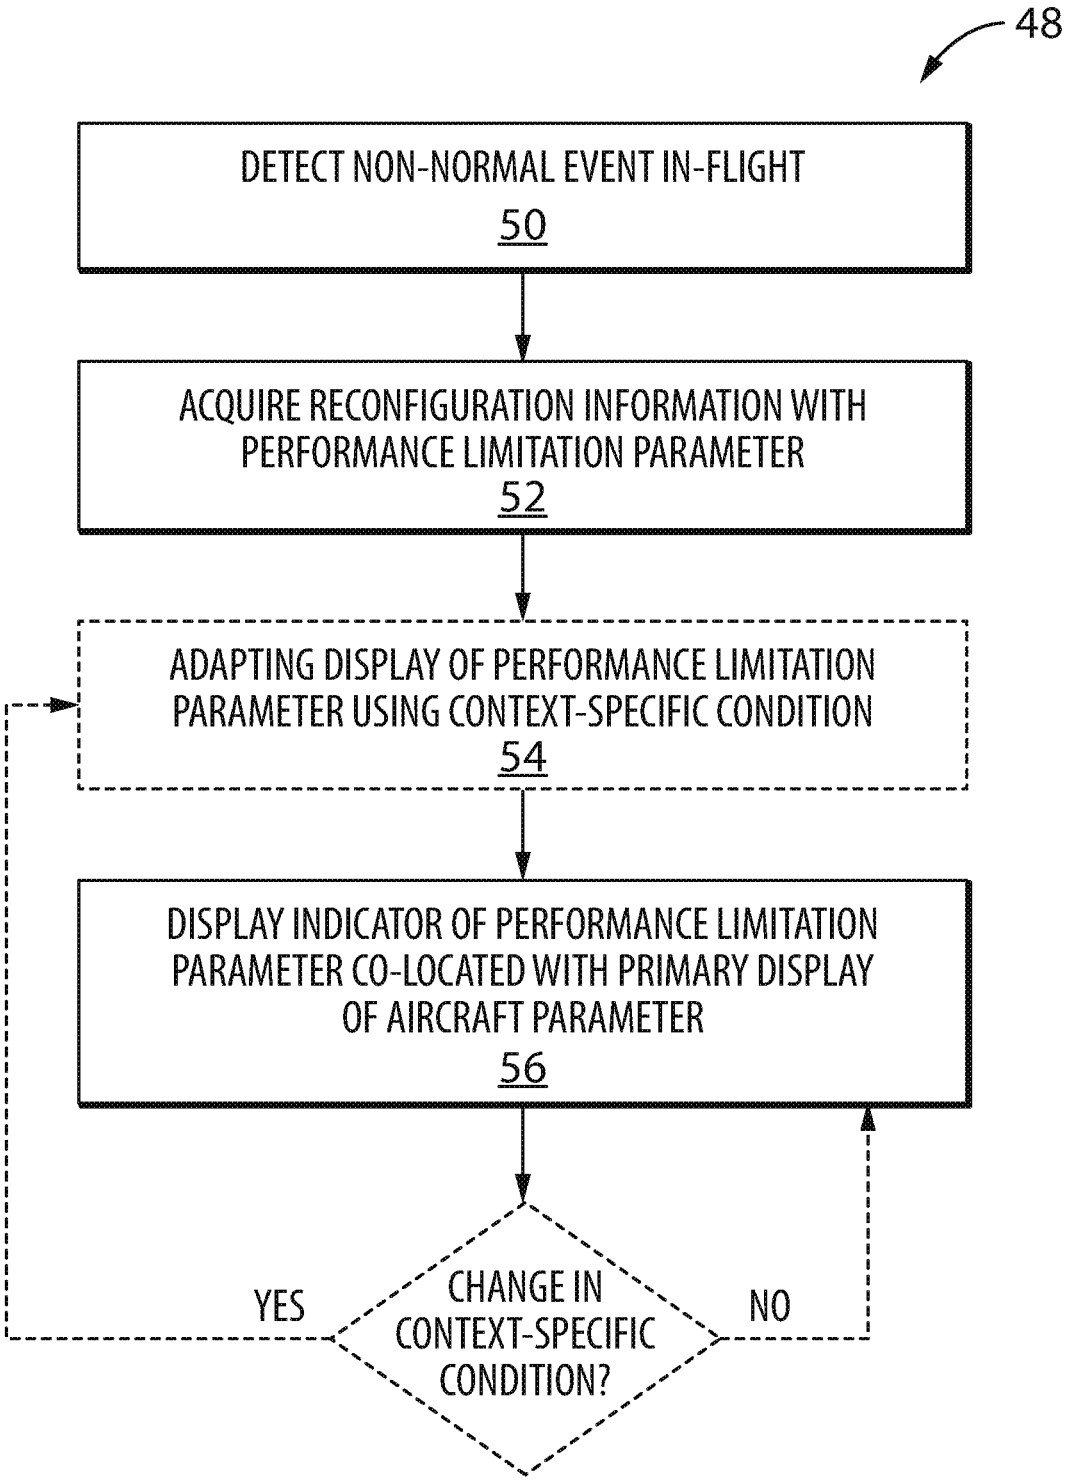
48
DETECT NON-NORMAL EVENT IN-FLIGHT
50
ACQUIRE RECONFIGURATION INFORMATION WITH PERFORMANCE LIMITATION PARAMETER
52
ADAPTING DISPLAY OF PERFORMANCE LIMITATION PARAMETER USING CONTEXT-SPECIFIC CONDITION
54
DISPLAY INDICATOR OF PERFORMANCE LIMITATION PARAMETER CO-LOCATED WITH PRIMARY DISPLAY OF AIRCRAFT PARAMETER
56
CHANGE IN CONTEXT-SPECIFIC CONDITION?
YES
NO

Fig. 4