
High Shear Rate -> Small Bubbles

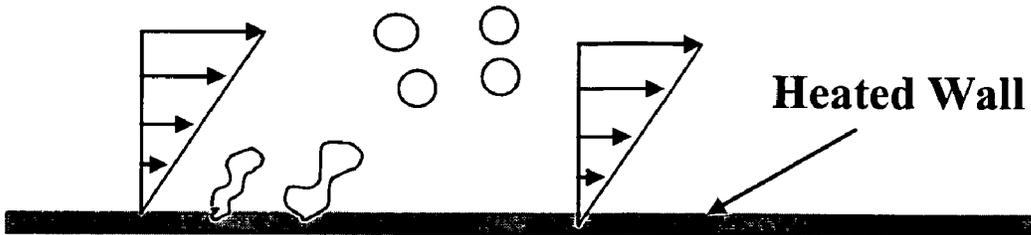


Fig. 32

Low Shear Rate -> Large Bubbles

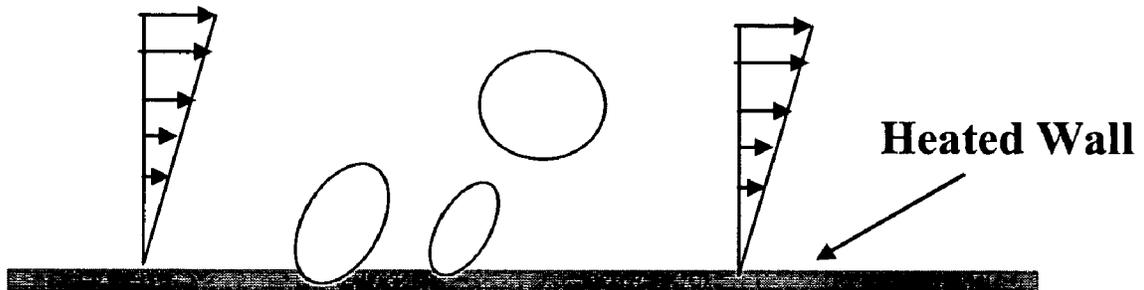


Fig. 33