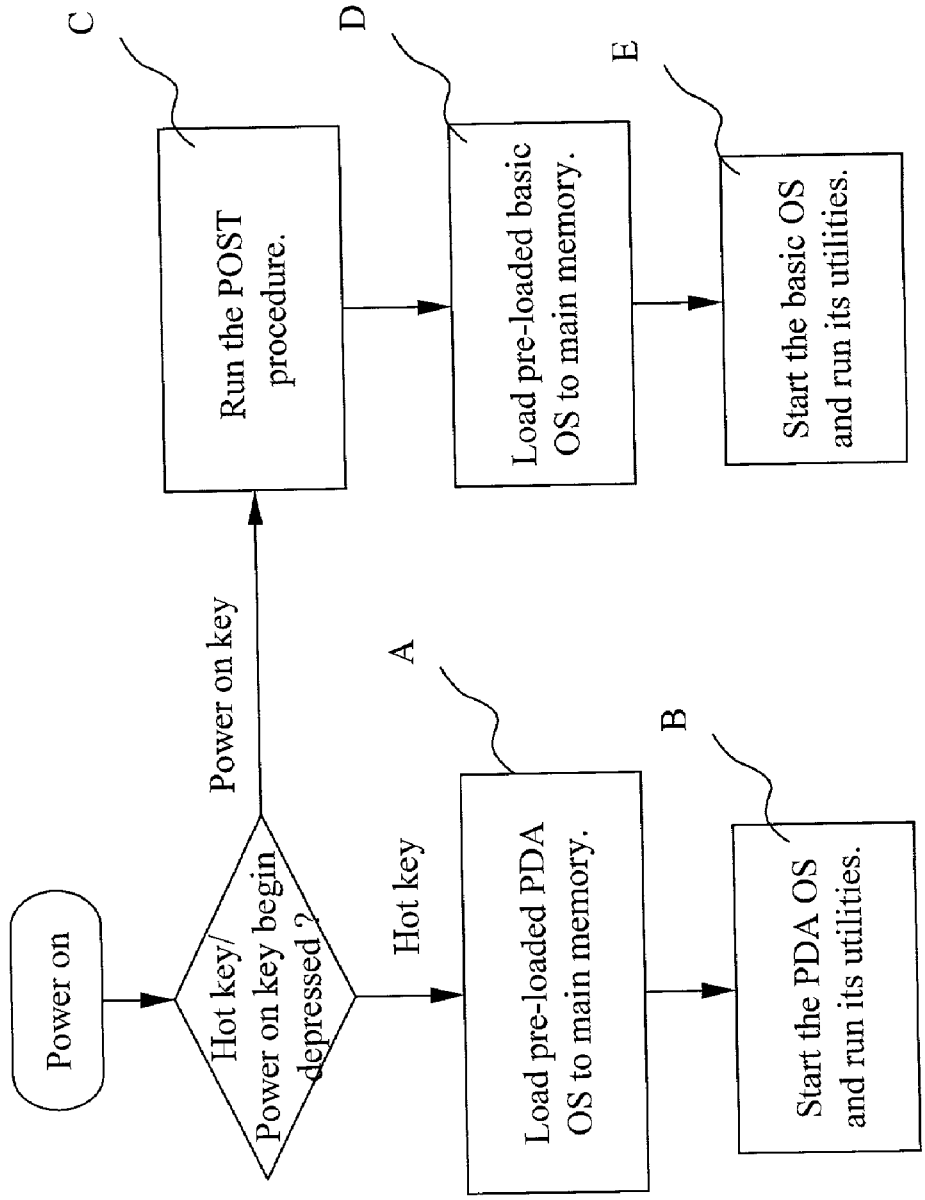
Power on
Hot key/
Power on key begin
depressed ?
Power on key
Hot key
C
Run the POST
procedure.
A
Load pre-loaded PDA
OS to main memory.
B
Start the PDA OS
and run its utilities.
D
Load pre-loaded basic
OS to main memory.
E
Start the basic OS
and run its utilities.

FIG. 4